

Coronavirus Sanitizing Guide

Anton/Bauer Power Solutions



Guidance for the cleaning of Anton/Bauer products.

Cleaning every time after shoot can make a difference in preventing the spread of infection, especially when your gear is being touched by several people on set. Here is a simple guide on how to sanitize your Anton/Bauer products during the coronavirus pandemic.

Please always refer to the user manual of your product for general cleaning advice and test cleaning fluids on inconspicuous areas first!

We recommend to use disinfectant wipes, alcohol wipes, Windex/Cidex or 70% Isopropyl alcohol solution. Care should be taken on printed areas to avoid excessive rubbing that could over time remove the printing.

- Do not use solvents, detergents or scouring agents.
- Do not wet the exposed metal part of the battery charge terminals.

Step 1 – Wash your hands as suggested by the World Health Organization.

Step 2 – Ensure the battery, charger or accessory is disconnected from any power source.

Step 3 – Place the battery, charger or accessory on a clean, dry, flat surface, on top of a soft cloth to prevent scratches.

Step 4 – Apply your sanitizing liquid to a clean cloth or paper towel so that it is damp, but not saturated. Do not spray or apply liquid directly to the battery, charger or accessory.

Step 5 – Wipe down the entire battery, charger or accessory, while taking extra care to avoid getting any moisture on the on the metal parts of the battery charge terminals. Pay extra attention to the parts touched by hands.

Step 6 – Repeat steps 3-5 for any travel cases or storage containers that are used.

Step 7 – Let the surface completely dry while washing your hands as in step 1.

Now you can get ready for your next shoot. We hope this guide helps you. Stay safe!

Storage and Cycling Recommendations

Storage - Batteries should always be charged to a fully charged state and kept cool. If batteries are stored for a longer period of time (over 30 days) the battery electronics will enter a “deep sleep” mode. The battery will “wake up” when placed on a charger.

Storage temperature - Batteries, chargers and accessories can be stored for extended periods at, -20C to 50C (-4F to 122F).

Storage state - Batteries can easily be stored for over a year without incident. To maintain optimal performance, we recommend one full cycle ever every 6 months.



Additional resources:

DIY Photography - How to thoroughly disinfect your camera and workspace
[lensrentals.com](https://www.lensrentals.com) - How to Disinfect Camera Equipment and Spaces

