


Compact universal Gold Mount[®] kit with mounting hardware and wire terminals, most DC powered professional video equipment utilize specific Gold Mount models (see *Anton/Bauer catalog's Gold Mount section and Product Application Guide*). The QRC-Gold is ideal for adapting video devices where no other Gold Mount is specified. Before adapting the QRC-Gold to any video device for the first time, check to confirm compatibility with an Anton/Bauer 14.4 volt battery.

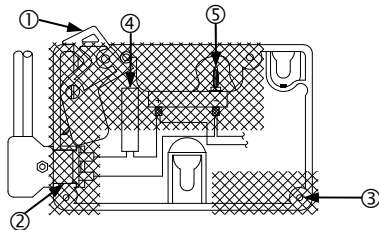

FEATURES

CAUTION: Open + and – wires inside bracket. DO NOT attach battery without terminating wires.

1. Cam action latch for improved ease of battery loading and removal. Red label below latch indicates battery is not fully latched, eliminating inadvertent battery unloading.
2. PowerTap[®] Connector. A built-in fused 10 amp connector for powering Ultralight[®] portable camera light and accessories. NOTE: Requires PowerTap connector. The PowerTap connector is included on all Ultralight 2 light assemblies and cable assemblies for the older Ultralight SINGLE or DUAL.
3. Mounting Pattern. The Snap-On Gold Mount bracket is fully compatible with all existing cameras and batteries using the Anton/Bauer mounting system. NOTE: When custom mounting the Gold Mount bracket system it is necessary to support the shaded areas (see Fig. A) against a flat surface. A backplate is provided with each Gold Mount bracket for this purpose.
4. PowerTap Fuse Holder. The fuse holder for the PowerTap connector. The fuse holder located in the bracket is press fit. To remove the fuse holder, grasp the main fuse holder body and pull up.

To replace the fuse:

- A. Remove the fuse from the fuse holder by pushing the assembly through the square access opening in the main body.
 - B. Pull the press fit fuse caps from both ends of the spent fuse and replace with a new fuse. (Note: The replacement fuse must be a 10 amp 250 volt 5 x 20mm fuse).
Manufacturer's part numbers: Anton/Bauer (3713-1010), Schurter (001.2514), or Little Fuse (218-010)
 - C. Replace both fuse caps onto the new fuse and press the fuse assembly back into the main body.
 - D. Press the fuse holder back into its original location within the bracket.
5. Banana Pins. The Gold Mount Banana Pins are gold plated with eight contact points for ultra-low resistance and optimum dependability. Both pins are externally removable with a 4mm hex nut driver for ease of serviceability. NOTE: When reinstalling pins, caution should be taken not to over tighten the pin assembly.

Replacement Banana pins are available only through the Anton/Bauer Customer Support Group. The Anton/Bauer part number is 3320-0105.

SERVICE

If you have any questions regarding this Anton/Bauer product, please call our Customer Support Group at 1-800-541-1667. If repair or appraisal is necessary, ship your product prepaid, together with proof of purchase, to Anton/Bauer Inc., 14 Progress Drive, Shelton, CT 06484 ATTENTION: SERVICE DEPARTMENT.

Use of unauthorized equipment in conjunction with Anton/Bauer products constitutes misuse under our warranties and may limit or void those warranties. Anton/Bauer does not authorize, condone, recommend, or otherwise assume any liability or responsibility resulting from the use of any battery, charger or accessory made by Anton/Bauer manufacture with any battery, charger or accessory not manufactured, produced or sold by Anton/Bauer. Anton/Bauer only authorizes the use of original Anton/Bauer product with this product. Use only original Anton/Bauer equipment with this product.